

Volvo XC60 II ab 2017

ClimAir
ar *omfort*

Part Number: 10067s-a

Date: 19-12-2019

PLAVA Kunststoffe GmbH
Am Spitzacker 22 - 61184 Karben

Sheet 1 of 4

© Copyright Windesa GmbH

GB Car darkening set doors Installation instruction	N Bilvinduet missfarging dører Installasjonsveiledning
D Autoscheibenverdarknung Türen Einbauanleitung	S Bilituan nyanseerings dörrar Monteringanvisning
E Ventana de coche puertas de tintado Instrucciones de instalación	SF Auton ikkunasta sävylystä ovet Asennusohjeet
F Portes teinter fenêtre de voiture Instructions d'installation	CZ Okno auto tónování dveře Pokyny k instalaci
I Finestrino della macchina porte colorazione Istruzioni per l'installazione	H Autó Ablakszínezés ajtók Szereelési útmutató
P Portas tintométrico janela do carro Instruções de instalação	PL Drzwi okienne samochod barwiących Instrukcje instalacji
NL Auto raam verven deuren Installatie-instructies	GR Παράφρα το αυτοκινήτου πόρτες χρωματισμού Οδηγίες εγκατάστασης
DK Bil vindue toning døre Monteringsvejledning	RUS Окрашивание двери окна автомобиля Инструкцияпоустановке



2 x





2 x



SC1-50

1

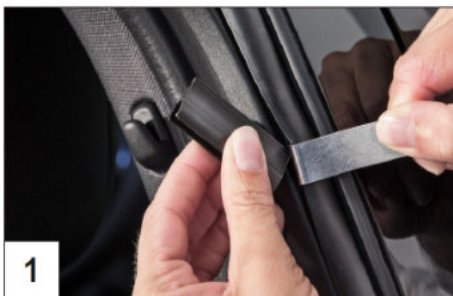

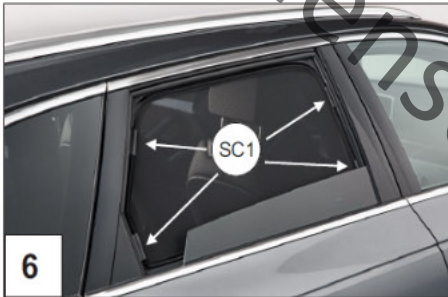

Volvo XC60 II ab 2017

UlimAir
air comfort

Part Number: 10067s-b

Date: 19-12-2019

PLAVA Kunststoffe GmbH
 An Spitzacker 22 · 61184 Karben

Sheet 1 of 4

© Copyright Windesa GmbH

GB Car darkening set side windows Installation instruction	N Miesfarging sidevindu bilvinduet Installasjonsveiledning
D Autoscheibenverdarkung Seitenfenster Einbauanleitung	S Nysneringssett for bilfenster Monteringsanvisning
E Ventana lateral teñidos de ventana de coche Instrucciones de instalación	SF Auton lükuna säilytysä sivukäytävän Asennusohjeet
F Portes teinter fenètre de voiture Instructions d'installation	CZ Okno auto okno tmnování side Pokrytí k instalaci
I Finestra laterale colorazione della finestra di automobile Istruzioni per l'installazione	H Auto Abblaskizetaz oldalablak Szerelezési útmutató
P Janela lateral tintométrico janela do carro Instruções de instalação	PL Okno boczne okno barwienia samochod Instrukcja instalacji
NL Auto raam verven zijruit Installatie-instructies	GR Προβλεψη τίκασης οριζοντιοών παραθύρων αυτοκινήτων Οδηγίες εγκατάστασης
DK Bil vindue vindue tønning side Monteringsvejledning	RUS Стекла тонировка стекла Автомобиля Инструкция по монтажу



2 x



2 x

SC8-20



Fertig ✓

Volvo XC60 II ab 2017

ClimAir
ar *omfort*

Part Number: 10067s-c

Date: 19-12-2019

PLAVA Kunststoffstoffe GmbH
Am Spitzacker 22 - 61184 Karben

Sheet 1 of 4

© Copyright Windesa GmbH

GB Car darkening set rear window Installation Instruction	N Bilvinduet vindu misfarging bak Installasjonsveiledning
D Autoschaiberverdunklung Heckfenster Einbauanleitung	S Bifönstret ryanser bakruta Monteringsanvisning
E Teñido de ventana trasera ventanilla del coche Instrucciones de instalación	SF Auton äikuna sävytysä takalasin Asennusohjeet
F Fenêtre arrière teintée fenêtre de voiture Instructions d'installation	CZ Okno auto okno tónování zadních Pokyny k instalaci
I Finestra colorazione lunotto auto Istruzioni per l'installazione	H Autó Ablakszínezés hátsó ablak Szereelési útmutató
P Tingimento de janela traseira janela do carro Instruções de instalação	PL Okna samochodów tylne okna barwienia Instrukcje instalacji
NL Autoruit raam verven achter Installatie-instructies	GR Παράθυρο του αυτοκινήτου φινιρίσματος πίσω Οδηγίες εγκατάστασης
DK Vindue toning bageste bil vindue Monteringsvejledning	RUS Осна автомобиля тонировка заднего стекла Инструкция по монтажу



1 x



1 x

SC9-20



